

MAKE YOUR OWN PAPER SQUISHY

Cream Carton · step-by-step instructions · tillyfern.com



 
You will need: printer paper (80–100 gsm) · clear packing tape · scissors · cotton wool or polyester stuffing · a needle (adult)

01 Print




Print the color or the coloring template on one sheet of regular paper (80–100 gsm). Choose 100% / Actual size and turn off “Fit to page”. Check that the guide line measures 2 cm.

02 Cover with tape

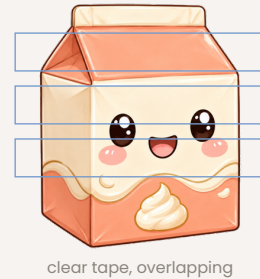

Lay clear packing tape over the printed side of both pieces. Overlap the strips a little and smooth them down with a card so there are no bubbles.

 03 Cut out both pieces

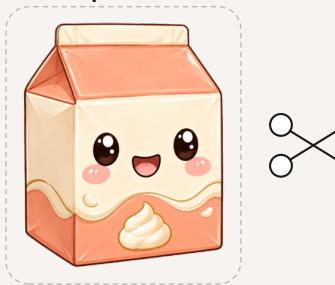

Cut along the dotted line, keeping the white border around each picture — you will tape the two halves together on this border.

04 Line up and tape



Put the blank sides together so both pictures face out. Line up the edges and join them with small strips of tape. Leave a 2–3 cm opening.

05 Add soft filling



Push a little cotton wool or polyester stuffing through the opening and spread it out inside. Do not pack it tight — a squishy should stay soft.

06 Seal and squeeze



tape shut · squeeze · tiny air hole if flat

Tape the opening shut and give it a gentle squeeze. If it stays flat, ask an adult to make one tiny air hole in the back with a needle.